

## Futaba Sender und Jive-Regleröffnung

Futaba – Jive – Formel:

$$(\text{Wert} + 100)/2 = (\text{Wert})$$

<u>Sender Futaba %</u>	<u>Jive Regler %</u>	<u>HeliJive</u>
------------------------	----------------------	-----------------

10%	54 % (55,0%)	
20%	59% (60,0%)	
30%	65% (65,0%)	54%
40%	71% (70,0%)	65%
50%	78% (75,0%)	80%
60%	84% (80,0%)	88-95%
65%	87% (82,5%)	
67%	100%	